



User Manual

LED Video Controller VX4S/VX4

Statement

You are welcome to use the products from Xi' an NovaStar Tech Co., Ltd. (hereinafter referred to as Novastar). It is our great pleasure to offer this manual to help you understand and use the product. We strive for precision and reliability during the compilation of this manual, and the contents of this manual are subject to change without notice. If you have any problem in use or you have any suggestion, please feel free to contact us according to the contact information provided in this manual. We will do our utmost to satisfy your needs. Also, we would like to express our sincere thanks to your suggestions and make assessment as soon as possible for adoption.

Copyright

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Xi' an NovaStar Tech Co., Ltd.

Trademark

NOVA 5TAR is a registered trademark of NovaStar Tech Co., Ltd.

Safety Statement

To avoid potential hazards, please use this equipment according to the regulations. In case of damages, non-professionals should not disassemble it for maintenance without permission. Please contact the after-sales department of the company.



High voltage danger: The operating voltage of this product is 100-240V AC.



Grounding: This production is connected to ground via the ground wire of power supply. Please ensure good grounding of grounding conductor.



Electromagnetic interference: The device should be kept far away from magnets, motors and transformers.



Moisture proof: Keep the equipment in a dry and clean environment. In case of liquid immersion, please pull the plug immediately.



Keep away from flammable and explosive dangerous goods.



Prevent liquids or metal fragments from being immersed into the machine to avoid safety accidents.

Contents

1	Model description	1
2	Appearance	1
	Front Panel	1
	Rear Panel	2
3	Signal connection	3
4	Dimension	3
5	Operating motion instruction	3
7	Main Interface Operation instruction	5
	Step1: Input Settings	5
	Step2: Screen Settings	5
	Setp3: Brightness	7
	Setp4: Output Settings	7
	Image Mosaic	8
	Advanced Settings	9
	Factory Reset	15
	Communication Settings	15
	Language	15
8	Specifications	16
9	FAQ	17


1 Model description

Model	Description (input interface type)
VX4	DVI×2, VGA×3, CVBS×3, HDMI×1, DP×1
VX4S	DVI×1, VGA×2, CVBS×2, HDMI×1, DP×1, SDI×1

Tips: VX4 has different type and number of interface with VX4S, but their functions and specifications are basically the same. In this manual, VX4 is described as the example.

2 Appearance

Front Panel



- 1 : Power switch.
- 2): Operation screen (Please see the section-Main Interface for detail).
- ③ :Knob. To press knob means Enter or OK, rotating knob represents selection or adjustment.
- (4): ESC. Escape current operation or selection.
- ⑤ : Four control keyboard shortcuts.

PIP: PIP Turn-on/off. The lighting of this key represents the turn-on of PIP; otherwise, PIP is turned off.

SCALE: Picture zoom turn-on/turn-off. The lighting of this key represents the turn-on of zoom function; otherwise, zoom function is unavailable.

MODE: Shortcut menu of loading or storage of display model. The key is light when entering the model or shortcut menu, in case of exiting, the key is not bright.

TEST: Shortcut of turn-on/off of testing picture. In case of entering testing picture, the key is bright; otherwise, the key is not bright.

⑤ :Shortcut keys for switching of 10 signal input source. Short press to set as the main screen input source, and long press to set as PIP input source. The key is bright after press when the video source has signal; the key flashes when the input of video source has no signal. The setting result can be checked while setting on the display screen and OLED screen.

Note: You can enter numbers, such as layer size and offset value, by pressing the number buttons. The number button will be highlighted after pressed.

⑦: Function keys.

TAKE: Display switching shortcut key. After short pressing TAKE key, PIP will be opened; if it has been opened, the switching between MAIN and PIP will be realized. Fn: Custom shortcut key.

(8): USB(Type A): USB Cascade OUT.

USB(Type-B): Communication with PC, or Cascade IN




Audio	Audio Input
DP	DP Input
HDMI	HDMI Input
CVBS1~CVBS3	3-Channel PAL/NTSC TV composite video Inputs
DVI -1~DVI-2	2-Channel DVI Inputs
VGA1~VGA3	3-Channel VGA Inputs
Output Interface	29
DVI LOOP	DVI LOOP Output
Monitor -DVI OUT1	DVI Monitoring Interface 1
Monitor -DVI OUT2	DVI Monitoring Interface 2
LED Out 1、2、3、4	4 Gigabit Ethernet outputs. Only Ethernet port 1 supports audio output. When the multifunction card is connected for audio decoding, the multifunction card must be connected to the Ethernet port 1.
Controlling Interface	
ETHERNET	Network Control (Communication with PC, or Access Network)
Type B, female USB	USB Control (Communication with PC, or Cascade IN)
Type A, female USB	USB Cascade OUT
Tips:The two USB interfaces	(typeA) on front panel and rear panel are both forbidden to

Tips:The two USB interfaces (typeA) on front panel and rear panel are both forbidden to connect with PC directly.

3 Signal connection


Connect the required hardware equipment reference with the interface descriptions of the previous chapters.

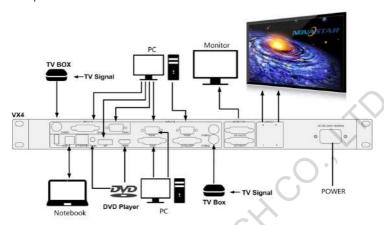

If it is required to control more than one set of VX4, please connect them according to the following figure.



4 Dimension

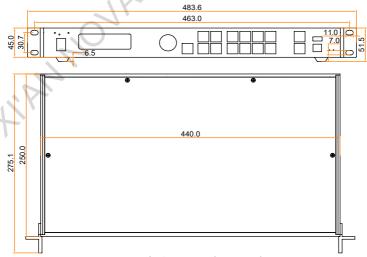

VX4 's dimension (Unit:mm)

5 Operating motion instruction

Knob:

- Press the knob under the main interface to enter the operation interface menu;
- Rotate the knob to select menu or press the knob under the operation interface of menu to select current menu or enter submenu;
- Rotate the knob to adjust the parameter after selecting the menu with parameter; press the knob again for confirmation after adjustment.

ESC: Return key, exit current menu or operation.

Key lock/unlock: long press knob and ESC key simultaneously.

6 Main Interface

After starting the controller, the main interface of OLED display is as follows:



First row: Company name; the name and IP of the product are shown alternately;

Second row: Main screen 1; signal source; input source signal format;

Third row: PIP 2; signal source; input source signal format;

Forth row: Status bar. the meanings of all icons are shown below.

1 2 3 4	LED Output (it is output Port 2 in primary mode currently, and the backup status is displayed as)
1	PIP is turned off
2	PIP is turned on
	The current effect is point-to-point display
3 8	It is "scale down" mode
5.3	It is "scale up" mode
	Image Mosaic is not enabled;
	Image Mosaic is enabled;
•	It is USB control currently
絽	It is network port control currently
0 25%	The current brightness is 25%



Sign of press key lock. When this icon appears at the main interface, it is in locking state for key and knob functions.

7 Operation instruction

The functions of VX4 are powerful with very simple operation, and multiple operations can be completed with a knob and a return key. The design of more than one shortcut keys makes operations more efficient.

Generally, the LED display can be used normally, and the brightness is moderate after conducting the following four steps: Input settings \rightarrow Screen settings \rightarrow Brightness \rightarrow Output settings. Other menus such as screen control and senior setting can help users better control LED display.

See the following section for details of operations.


Step1: Input Settings

Set resolution of input source signal. Resolution can be directly set and changed for digital input interfaces DVI, HDMI and DP. Resolution can only be modified with other input methods on input devices.

Input resolution can be set in two methods:


Method one: Preset Resolution

Selection is made in preset resolution of the controller. If there is no preset resolution, you can select the second method and customize resolution.



Method two: Custom Resolution

Set Horizontal Res, Vertical Res and Custom· refresh rate and then select "Apply" and press the knob for application. If the application is not confirmed, custom resolution is invalid.




Step2: Screen Settings

The precondition of Screen setting in shortcut is that the screen must be regular rectangle (not special-shaped), cabinet must be regular rectangle and the size of each cabinet are identical.

Step 1 The screen being power-on, if the cabinet is in normal display, enter into Step 2; if the cabinet is in abnormal display, first, load the cabinet file, and save it to the

receiving card; see detailed operation in Advanced Settings;

Step 2 Return to the "Screen Settings" submenu. Rotate the button to switch to submenus of other options respectively to perform configurations, as shown in the following figures:



- Step 3 Set Cabinet Row Qty and Cabinet Column Qty according to the actual situation of the screen;
- Step 4 Set Port1 Cabinet Qty. The device has some limitations on the cabinet quantity of ports. For details, see precautions for screen settings;
- Step 5 Set the Data Flow (Front View). Pay attention to precautions for screen settings c),d) and e) below.

Precautions for screen settings:

(a) If the number of ports with loads is n (n≤4), the first n-1 ports must load the same number of cabinets, which must also be an integral multiple of the number of cabinet rows or columns and be greater than or equal to the number of cabinets for the nth ports.

Example:


For example, if port 1, port 2, port 3 have loads, port 1 and port 2 must have the same number of cabinets, which must also be an integral multiple of the number of cabinet rows or columns. Therefore, you only need to set port 1 cabinet Qty according to the actual situation when setting the screen. The number of receiving cards port 3 loads must be smaller than or equal to port 1.

- (b) In the case of special-shaped cabinets, different cabinet sizes and special-shaped screen, the NovaLCT-Mars software is required to be connected to configure the screen.
- (c) During Data Flow setting, you can rotate the button to see the effects of different data flow on the screen in real time. If you are satisfied with the effect of current data flow, you must press the button to save the setting. You can press the ESC to exit from the current operation.
- (d) During Data Flow setting, you must ensure that the data flow of each port is downward in the same direction.
- (e) During Data Flow setting, you must ensure that Port 1 is the start position of the whole data flow connection.

VX4 can load 2.3 million (2048x1152@60Hz) pixels in maximum. The width of lateral load can reach to 3840 pixels in maximum (3840x600@60Hz); the longitudinal load can reach to 1920 pixels in maximum (1920 x1200@60Hz).

Setp3: Brightness

Return to the main menu interface. Press the Knob to select the corresponding value of Brightness. You can rotate the Knob to adjust the value at this time.




Setp4: Output Settings

Output settings are divided into three cases:

First one: disable Scaling, i.e., the sizes of output image and input image are the same, and original scale output is used. If the input resolution is smaller than the LED display in one direction, LED display may not become bright in this direction; if the input resolution is greater than the LED display in one direction, the input contents may not be displayed completely in this direction. This option is applicable to the application scenarios requiring point-to-point display. Horizontal offset and vertical offset of images can be set according to the needs, and at this time the displayed contents may move to the left or top at the LED display.

At this point [Scaling] is disabled.

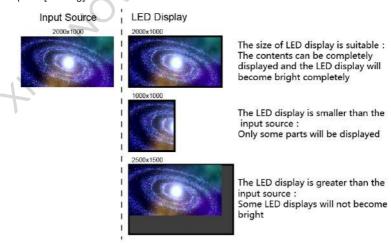

Second one: Auto Fit. At this point [Scaling] is enabled, and [Auto Fit] is enabled.

When enabling [Auto Fit], the input contents will be fully zoomed to the size of LED display, and the input contents will be adaptive to the size of LED display. This mode is suitable for full-screen playback of the contents.


Third one: Custom Scaling. At this point [Scaling] is enabled, while [Auto Fit] is disabled.

The following steps should be performed for custom scaling:

Step 1 Set the input Capture, i.e., capture part of the interesting screens from one starting point of inputting image and display it on LED display. It is generally required to set Horizontal Res (smaller than or equal to the lateral resolution of input source), Vertical Res (smaller than or equal to the vertical resolution of input source), horizontal X and vertical Y.



Step 2 Set output window, the size of window is smaller than or equal to the size of LED display; after setting the window, the images can only be adaptive to the displayed size within the range of window. This option is applicable to the application scenarios requiring reserving border at the LED display or restricting playing area.



After setting according to the above two steps, the captured contents will only be input and displayed at the set area on the LED display, as shown below:





Image Mosaic

When the display screen is huge, two or more VX4 need to be cascaded for loading the huge screen;

Choose the method of Image Mosaic: Equal Division, Unequal Division.

- Equal Division: Each VX4 has same load area. It is only required to set total pixel points, rows ,columns of the big screen and the serial No. of each VX4.
- Unequal Division: Each VX4 could have different load area. It is required to set the total pixel points and the load area size as well as load area staring position of each VX4.

Image Mosaic example: The total number of pixels of LED display is 3000×1000, exceeding the load capacity of single VX4. Two sets of VX4 are used for Image Mosaic processing. The connection method is shown in the right figure.

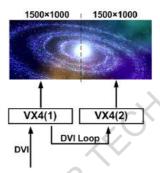


Please choose Equal Division or Unequal Division while setting detailed parameters. The specific parameter settings are shown in the following tables.

Equal Division						
	VX4 (1)	VX4 (2)				
Total Width Pixels	30	000				
Total Height Pixels	10	000				
Mosaic Row Qty		1				
Mosaic Column Qty		2				
Load Area Position	1	2				


Unequal Division						
	VX4 (1)	VX4 (2)				
Total Width Pixels	30	000				
Total Height Pixels	10	000				
Load Area Width	1500	1500				
Load Area Height	1000	1000				
Load Area Start X	0	1500				
Load Area Start Y	0	0				

Advanced Settings

Several setting options of main functions are included in advanced settings, as shown in the figure below. Operation of each function will be detailed for users in the following text.

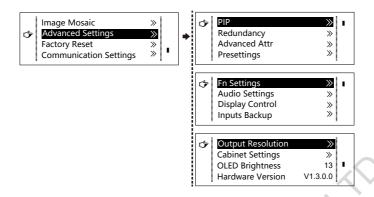

PIP

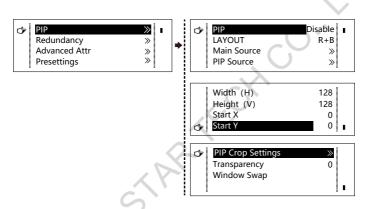

Control the turn-on/off of PIP, Set input source of main screen and PIP, as well as parameters of PIP.

Layout: the position of PIP relative to main screen, including eight modes of layout such as Custom, Left Top, Left Bottom, Right Top etc. When choosing any mode except Custom , the values of horizontal and vertical offset of PIP are able to adjust to the corresponding values of layout automatically. The meaning of each layout mode is shown below:

- Custom refers to that the size and position of PIP need to be set.
- Left Top, Left Bottom, Right Top, Right Bottom, Center refer to that PIP overlaps with the top-left corner, bottom-left corner, top-right corner, bottom- right corner and center of main screen.
- Top Bottom, Left Right refer to that main screen and PIP are distributed from top to bottom or left to right.

Main source/PIP source: Input source switching of main picture and PIP is the same as the role of input source switching on the front panel.

Horizontal Res : Horizontal offset of PIP
Vertical Res : Vertical offset of PIP

VX4S/VX4 User's Manual

Horizontal X: Horizontal width of PIP **Vertical Y**: Vertical height of PIP

PIP Crop Settings: Picture is cropped from the set starting position and is displayed on PIP and its size is set horizontal width and vertical height.

Enable this function and then set horizontal width, vertical height, horizontal X and vertical Y.

Transparency: the transparency of PIP

Window Swap: swap play content of main screen and PIP.

The Conflict List of PIP Signal Source (VX4)

					1) `
		input S	Input Source of Main Channel						\wedge		
		HDMI	DVI1	DVI2	VGA1	VGA2	VGA3	CVBS1	CVBS2	CVBS3	DP
	HDMI	-	٧	×	٧	٧	٧	٧	٧	٧	٧
	DVI1	٧	-	٧	×	٧	٧	×	V	٧	٧
	DVI2	×	٧	-	٧	٧	٧	٧	٧	٧	٧
PIP	VGA1	٧	×	٧	-	٧	٧	x	٧	٧	٧
Input	VGA2	٧	٧	٧	٧	-	×	٧	٧	٧	٧
Source	VAG3	٧	٧	٧	٧	×		٧	٧	٧	٧
	CVBS1	٧	×	٧	×	٧	٧	-	٧	٧	٧
	CVBS2	٧	٧	٧	٧	٧	٧	٧	-	×	٧
	CVBS3	٧	٧	٧	٧	٧	٧	٧	×	-	٧
	DP	٧	٧	٧	٧	٧	٧	٧	٧	٧	-

The Conflict List of PIP Signal Source (VX4S)


HDMI -			1	Input S	ource of I	Main Chan	inel		
		HDMI	DVI	VGA1	VGA2	CVBS1	CVBS2	SDI	DP
	HDMI		×	٧	٧	٧	٧	٧	٧
	DVI	×	-	٧	٧	٧	٧	٧	٧
PIP	VGA1	٧	٧	-	×	٧	٧	٧	٧
Input	VGA2	٧	٧	×	-	٧	٧	٧	٧
Source	CVBS1	٧	٧	٧	٧	-	×	٧	٧
	CVBS2	٧	٧	٧	٧	×	-	٧	٧
	SDI	٧	٧	٧	٧	٧	٧	-	٧
	DP	٧	٧	٧	٧	٧	٧	٧	-

- $\sqrt{}$ denotes the input sources can be used by both the main screen and PIP at the same time.
- x denotes the input sources cannot be used by both the main screen and PIP at the same time
- denotes the main screen and PIP use the same input source.

Redundancy

Set this controller as primary or backup mode.

Advanced Attribute



- VGA Auto ADJ: Sampling parameters of VGA input signal are automatically adjusted so that the VGA picture is clear and complete. Select this menu and then press the knob once and perform VGA automatic adjustment once. (VGA1 does not support this feature)
- ADC calibration: when analog signal accesses, processors that are not calibrated by ADC may have defects such as color cast or picture dark. VX4 can automatically make ADC calibration based on input analog signal (including CVBS and VGA) to solve the problems above. Select this menu and then press the knob once and perform ADC calibration once.
- Video Synchronization: allow that the input and output of VX4 are synchronous.
- Go Homepage(s): The time period during which the system stops at current interface and then automatically returns to home screen when there is no operation. The system default value is 60s.

Presettings

Save the current configuration parameters as Presettings. The Presettings can be directly loaded next time, and 10 Presettings are saved by default.


Custom Button

Fn Settings. The functions of custom button include Black Out, Freeze、VGA Auto ADJ、Video Synchronization. Press Fn key to directly conduct the function switch.


Audio Settings

Control the enabling /disenabling of Audio, volume and Audio mode.

For example, when using the audios input via Audio In port, it is required to enable audios first and then select the Audio mode to be fixed; when using the Audio from HDMI, set the Audio mode to be accompanied after enabling audios and then switch source to HDMI, and the Audio we hear comes from HDMI.



Display Control



- Normal: Normally display. Blank Out: The display is blank
- Freeze: The current play lists are frozen.
- Testing Pattern: There are eight kinds of testing screens in total, including pure color and lines.
- Image Settings


Contrast, Saturation, Hue, Color Temperature, Red, Green, Blue and Gamma value are set according to the requirements. After they are adjusted to satisfaction, the parameters should be saved.

 Switching Effect: Set the effects when switching screens, including Quick switch, Fade, Shrink Center, Shrink Left Top, Zoom Center, Zoom Left Top and turning off. After selecting the desired effect, it will take effect after pressing the knob.

Tips: When enabling PIP function, the switching effect will automatically disappear. Only when PIP function is turned off, the special effect function of channel switching can take effect.

Inputs Backup

To specify backup for input source and automatically switch to backup source if the signal of input source has faults, which makes it more reliable.



HDMI DP Indicating that DP has been set as the backup of HDMI and main input source(which cannot be changed) is in left side of the arrow while backup(which can be changed) is in the right side;


Both main input source and backup can be customized in Custom mode.

Output Resolution

This function can be used to set the the output resolution of monitoring. Users can set the function according to actual use and choose either Reset Resolution or Custom.



Cabinet Settings




Load Cabinet Files


VX4 is connected with PC. NovaLCT-Mars runs on PC and the cabinet setting file saved previously is imported into controller.

1) Save cabinet configuration file.


After receiving card is configured, click and save cabinet configuration file (.rcfg) to local file on PC.

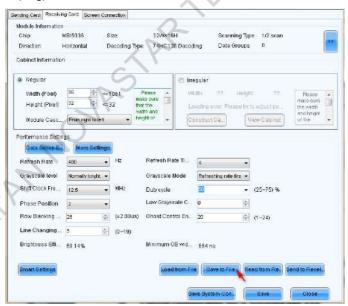

2) Cabinet configuration file is imported into VX4.

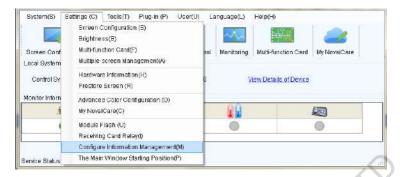

3) Load Cabinet Files.



Save to RV Card

All current configurations about the recieving card of VX4 are saved into receiving card and will not be lost after power fault.

OLED Brightness

Adjust the gray scale of OLED display.

Hardware Version

View the hardware version of VX4. If new version has been published, LCT-Mars can be connected via PC and the hardware program of VX4 can be upgraded

Factory Reset

Reset to factory default setting.

Communication Settings

Set the communication mode and network parameter of VX4.

The communication modes include USB priority and LAN (local area network) priority. When VX4 is connected to USB control and LAN control interface simultaneously, USB takes priority in the settings, adopts USB control; otherwise, LAN takes priority in the settings, adopts LAN control.

The network parameter can be set both manually and automatically. Ensure that the IP address is not conflict with other equipment when setting parameter manually.

Language

Switch Language.

8 Specifications

Input								
Port -	Number		Resolution Specification					
POIL -	VX4	VX4S	Resolution Specification					
VGA	3	2	VESA Standard, support max 1920×1200@60Hz input					
DVI	2	1	VESA Standard (support 1080i input), support HDCP					
CVBS	3	2	PAL/NTSC					
LIDMI	1	1	EIA/CEA-861 standard, in accordance with HDMI-1.3					
HDMI	1	1	standard, support HDCP					
DP	1	1	VESA Standard					
SDI	0	1	480i、576i、720P、1080i/P					
			60					
Output			. 0					
Dort	Number		Desclution Charification					
Port	VX4	VX4S	Resolution Specification					
DVI LOOP	1	1	Consistent with DVI input					
DVI	2	2	Monitoring output connector					
SDI LOOP	0	1	Consistent with SDI input					
			4 Gigabit Ethernet outputs. Only Ethernet port 1 supports					
			audio output. When the multifunction card is connected for					
. == 0.11=			audio decoding, the multifunction card must be connected					
LED OUT	4	4	to the Ethernet port 1.					
		~>	Maximum horizontal resolution is 3840 pixels.					
	•		Maximum vertical resolution is 1920 pixels					

Specification of complete machine					
Input Power	AC 100-240V, 50/60Hz				
Overall Power Consumption	25W				
Operating Temperature	-20~60°C				
Size	482.6×251.5×45 (mm)				
Weight	2.55 Kg				

9 FAQ

Questions	Methods
	Inspect whether the power connection is correct and the switch has been turned on;
LED display is off	Play the Self test image and confirm whether the connection of LED is correct and works normally;
	Inspect whether VX4 output has signal and shows blank screen;
	Inspect whether the mode and parameter of screen configuration are correct;
	Check whether there is image input in input channel and whether it is correctly displayed;
	Check whether PIP has been turned on, whether there is signal input in 2 channel and whether it is correctly displayed;
Monitoring port output is abnormal	Check whether monitoring output is connected correctly and it is not loose;
	Please confirm whether Monitor supports the output resolution of VX4;
	Try to cut off the power of equipment and restart it, reset VX4 and operate again;
Phase of VGA input offset	Perform VGA Auto ADJ;
PIP display is abnormal	Check whether there is signal input in 2 channel and it is normally displayed;
	Check PIP and confirm whether parameter setting is normal;
Fading is abnormal	Check whether Switching effect has been enabled;
Image Mosaic is abnormal	Check whether the VX4 Image Mosaic switch has been turned on and whether Image Mosaic parameters settings is correct; Check whether input signal source is normal;
A	Check whether the volume settings is appropriate;
	Check whether the Audio mode setting is correct;
Sound is abnormal	Confirm VX4 is well connected to multifunction card, and the corresponding output port icon on the main interface has been
	highlighted; confirm whether the audio output mode of multifunction card is HDMI mode (it is required to connect LCT for confirmation and setting);

Please preliminarily investigate problems according to the above steps; if you cannot eliminate the problems, please contact the local dealer or our company's customer service personnel.

There is high voltage inside the machine. In order to guarantee your safety, please do not maintain the processor by yourself.